



Front Suspension

4. Remove the spacer and spring seat.

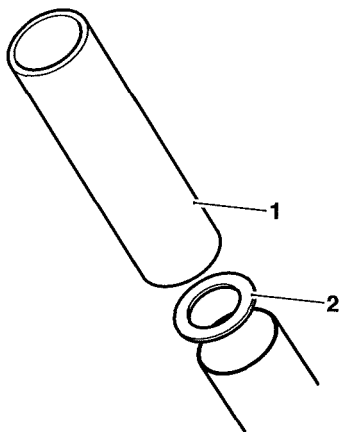

1. Spacer
2. Spring seat

5. Lift out the spring.

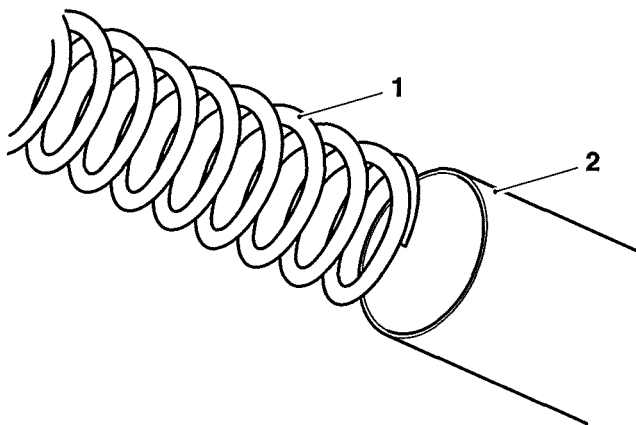


1. Spring
2. Fork tube


6. Invert the fork and pour out the fork oil into a suitable container. Pump the fork assembly to remove all oil.

Oil refilling

Note:

- The oil level specified for Rocket III Touring is 110 mm from the upper surface of the fork inner tube, with the spring removed and the fork fully compressed.

 Warning
Any variation from the figures quoted above could result in an unsafe riding condition leading to loss of motorcycle control and an accident.

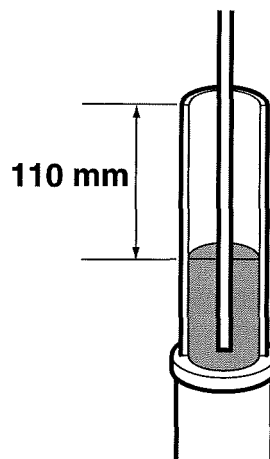

1. Fork oil level (fork fully compressed)

7. Upright the fork and fill the fork with Kayaba KHL34-G10 (SAE 10W) fork oil until the oil level is slightly above the recommended level.
8. Pump the fork assembly several times to expel any trapped air then fully compress the fork and support it in an upright position. Leave the fork for a few minutes to allow the oil level to stabilise.